

## LipuJet-P-RA Extension stage 3

### Product information for the product group



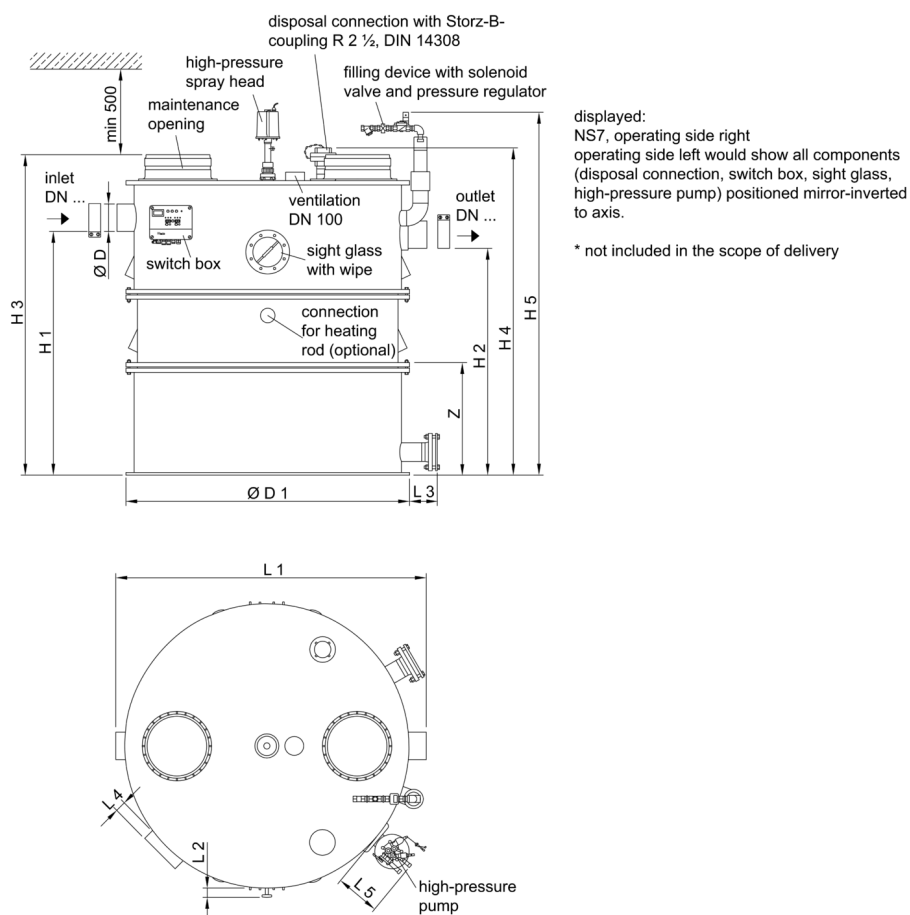
#### ACO Product benefits

- Easy to transport and fit thanks delivery of individual parts
  - Odour-free emptying, cleaning and filling
  - Pre- and post-cleaning times can be set individually
  - Hydromechanical high-pressure cleaning – only a cold-water connection required
  - Can be equipped with an disposal pump
  - Small delivery dimensions
  - Low weight
- Grease separator plant as per DIN EN 1825 and DIN 4040-100
  - For indoors installation – frost free
  - With integrated sludge trap
  - Operating side: right/left
  - Draining connection, fire hose quick coupling B 2½"
  - Suction and emptying sump with drain plug socket 1½"
- Inspection window with wiper
  - Automatic high-pressure internal cleaning with pump
    - Nominal pressure: 175 bar
    - Capacity: 13 l/min
    - Chopping, mixing, rinsing in one process
  - Standard control with group fault reporting
- Odour-proof maintenance opening, diameter: 350 mm
  - Filling device with magnetic valve (connection ¾") for automatic refilling
  - Electrical connector: 400 V/50 Hz/16 A/3,9 kW
  - System ACO Passavant
    - Building Supervisory Authority approval Z-54.1-491

### Item Technical Data 3507.73.32

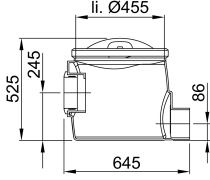
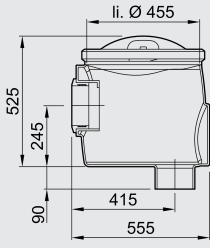
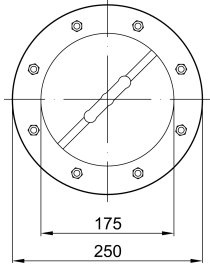
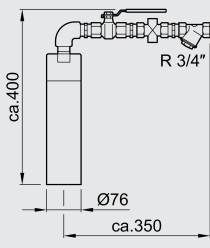
Nominal capacity	Nominal width	Contents			Weight			Operation side
		Sludge trap	Grease store	Overall	Empty	Full	Heaviest single component	
		[l]	[l]	[l]	[kg]	[kg]	[kg]	
NS 7	DN 150	830	400	2120	353	2473	112	Left-hand

## Dimensions



Nominal capacity	Dimensions												
	L1	L2	L3	L4	L5	H1	H2	H3	H4	H5	D	D1	Z/Anzahl Segmente
	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	
NS 7	1820	60	200	65	260	1430	1330	1880	1930	2130	160	1660	785/3

## Accessories

	Description	Used with	Description	Item number
	Sampling pot DN 150	<ul style="list-style-type: none"> <li>■ Grease separator LipuJet-P/LipuSmart-P <ul style="list-style-type: none"> <li>□ NS 5.5 – 10</li> </ul> </li> <li>■ Starch separator FapuJet-P-OAP <ul style="list-style-type: none"> <li>□ NS 2</li> </ul> </li> </ul>	<ul style="list-style-type: none"> <li>■ For installation of horizontal pipes DN 150 to grease separator</li> <li>■ Round shape with <ul style="list-style-type: none"> <li>□ Coupling socket seal (material SBR) on inlet and spigot on outflow</li> <li>□ Odour-proof maintenance opening DN 450</li> </ul> </li> <li>■ Weight: 10.1 kg</li> </ul>	<b>3300.09.21</b>
	Sampling pot DN 150	<ul style="list-style-type: none"> <li>■ Grease separator LipuJet-P/LipuSmart-P <ul style="list-style-type: none"> <li>□ NS 5.5 – 10</li> </ul> </li> <li>■ Starch separator FapuJet-P-OAP <ul style="list-style-type: none"> <li>□ NS 2</li> </ul> </li> </ul>	<ul style="list-style-type: none"> <li>■ For installation in vertical pipes DN 150 going to grease separator</li> <li>■ Round shape with <ul style="list-style-type: none"> <li>□ Coupling socket seal (material SBR) on inlet and spigot on outflow</li> <li>□ Odour-proof maintenance opening DN 450</li> </ul> </li> <li>■ Weight: 10.1 kg</li> </ul>	<b>3300.10.21</b>
	Viewing window	<ul style="list-style-type: none"> <li>■ Grease separator <ul style="list-style-type: none"> <li>□ LipuJet-P-OB/OD/R/RD</li> <li>□ LipuSmart-P-OB/OD</li> </ul> </li> <li>■ BioJet-P-OM/RM (NS 2-25)</li> </ul>	<ul style="list-style-type: none"> <li>■ Nominal width: DN 200</li> <li>■ With screen wiper</li> <li>■ Weight: 3.2 kg</li> </ul>	<b>3300.11.10</b>
	Filling device	<ul style="list-style-type: none"> <li>■ Grease separator <ul style="list-style-type: none"> <li>□ LipuJet-P-OB/OD/R/RD</li> <li>□ LipuSmart-P-OB/OD</li> </ul> </li> <li>■ BioJet-P-OM/RM (NS 2-25)</li> </ul>	<ul style="list-style-type: none"> <li>■ Free outlet as per DIN 1988 Part 4</li> <li>■ For connection to drinking water supply</li> <li>■ With ball valve R 3/4"</li> <li>■ With pressure relief valve</li> <li>■ Weight: 3.5 kg</li> </ul>	<b>3300.11.22</b>

	Description	Used with	Description	Item number
	Grease layer thickness measuring device	<ul style="list-style-type: none"> <li>■ LipuJet-P <ul style="list-style-type: none"> <li>□ Oval NS 1 – 10</li> <li>□ Round NS 2 – 20</li> </ul> </li> <li>■ LipuJet-S <ul style="list-style-type: none"> <li>□ Oval NS 1 – 10</li> <li>□ Round NS 2 – 20</li> </ul> </li> <li>■ LipuSmart-P <ul style="list-style-type: none"> <li>□ Oval NS 1 – 10</li> </ul> </li> </ul>	<ul style="list-style-type: none"> <li>■ For electronic measurement of layer of grease</li> <li>■ Suitable for liquid and/or congealing grease</li> <li>■ Measuring device with plug and used connecting cable, length: 3 m</li> <li>■ With two voltage-free changeover contacts to display full warning (80 %) and advance warning of fill level (50 %)</li> <li>■ With visual display of fill level</li> <li>■ With heated probe rod to increase reliability of operation</li> <li>■ Operating voltage: 230VAC/5 VA</li> <li>■ Max consumption approx. 12 W</li> <li>■ Weight: 2.8 kg</li> </ul>	<b>3300.11.50</b>

You can find further accessories under → [/35077332](#)